


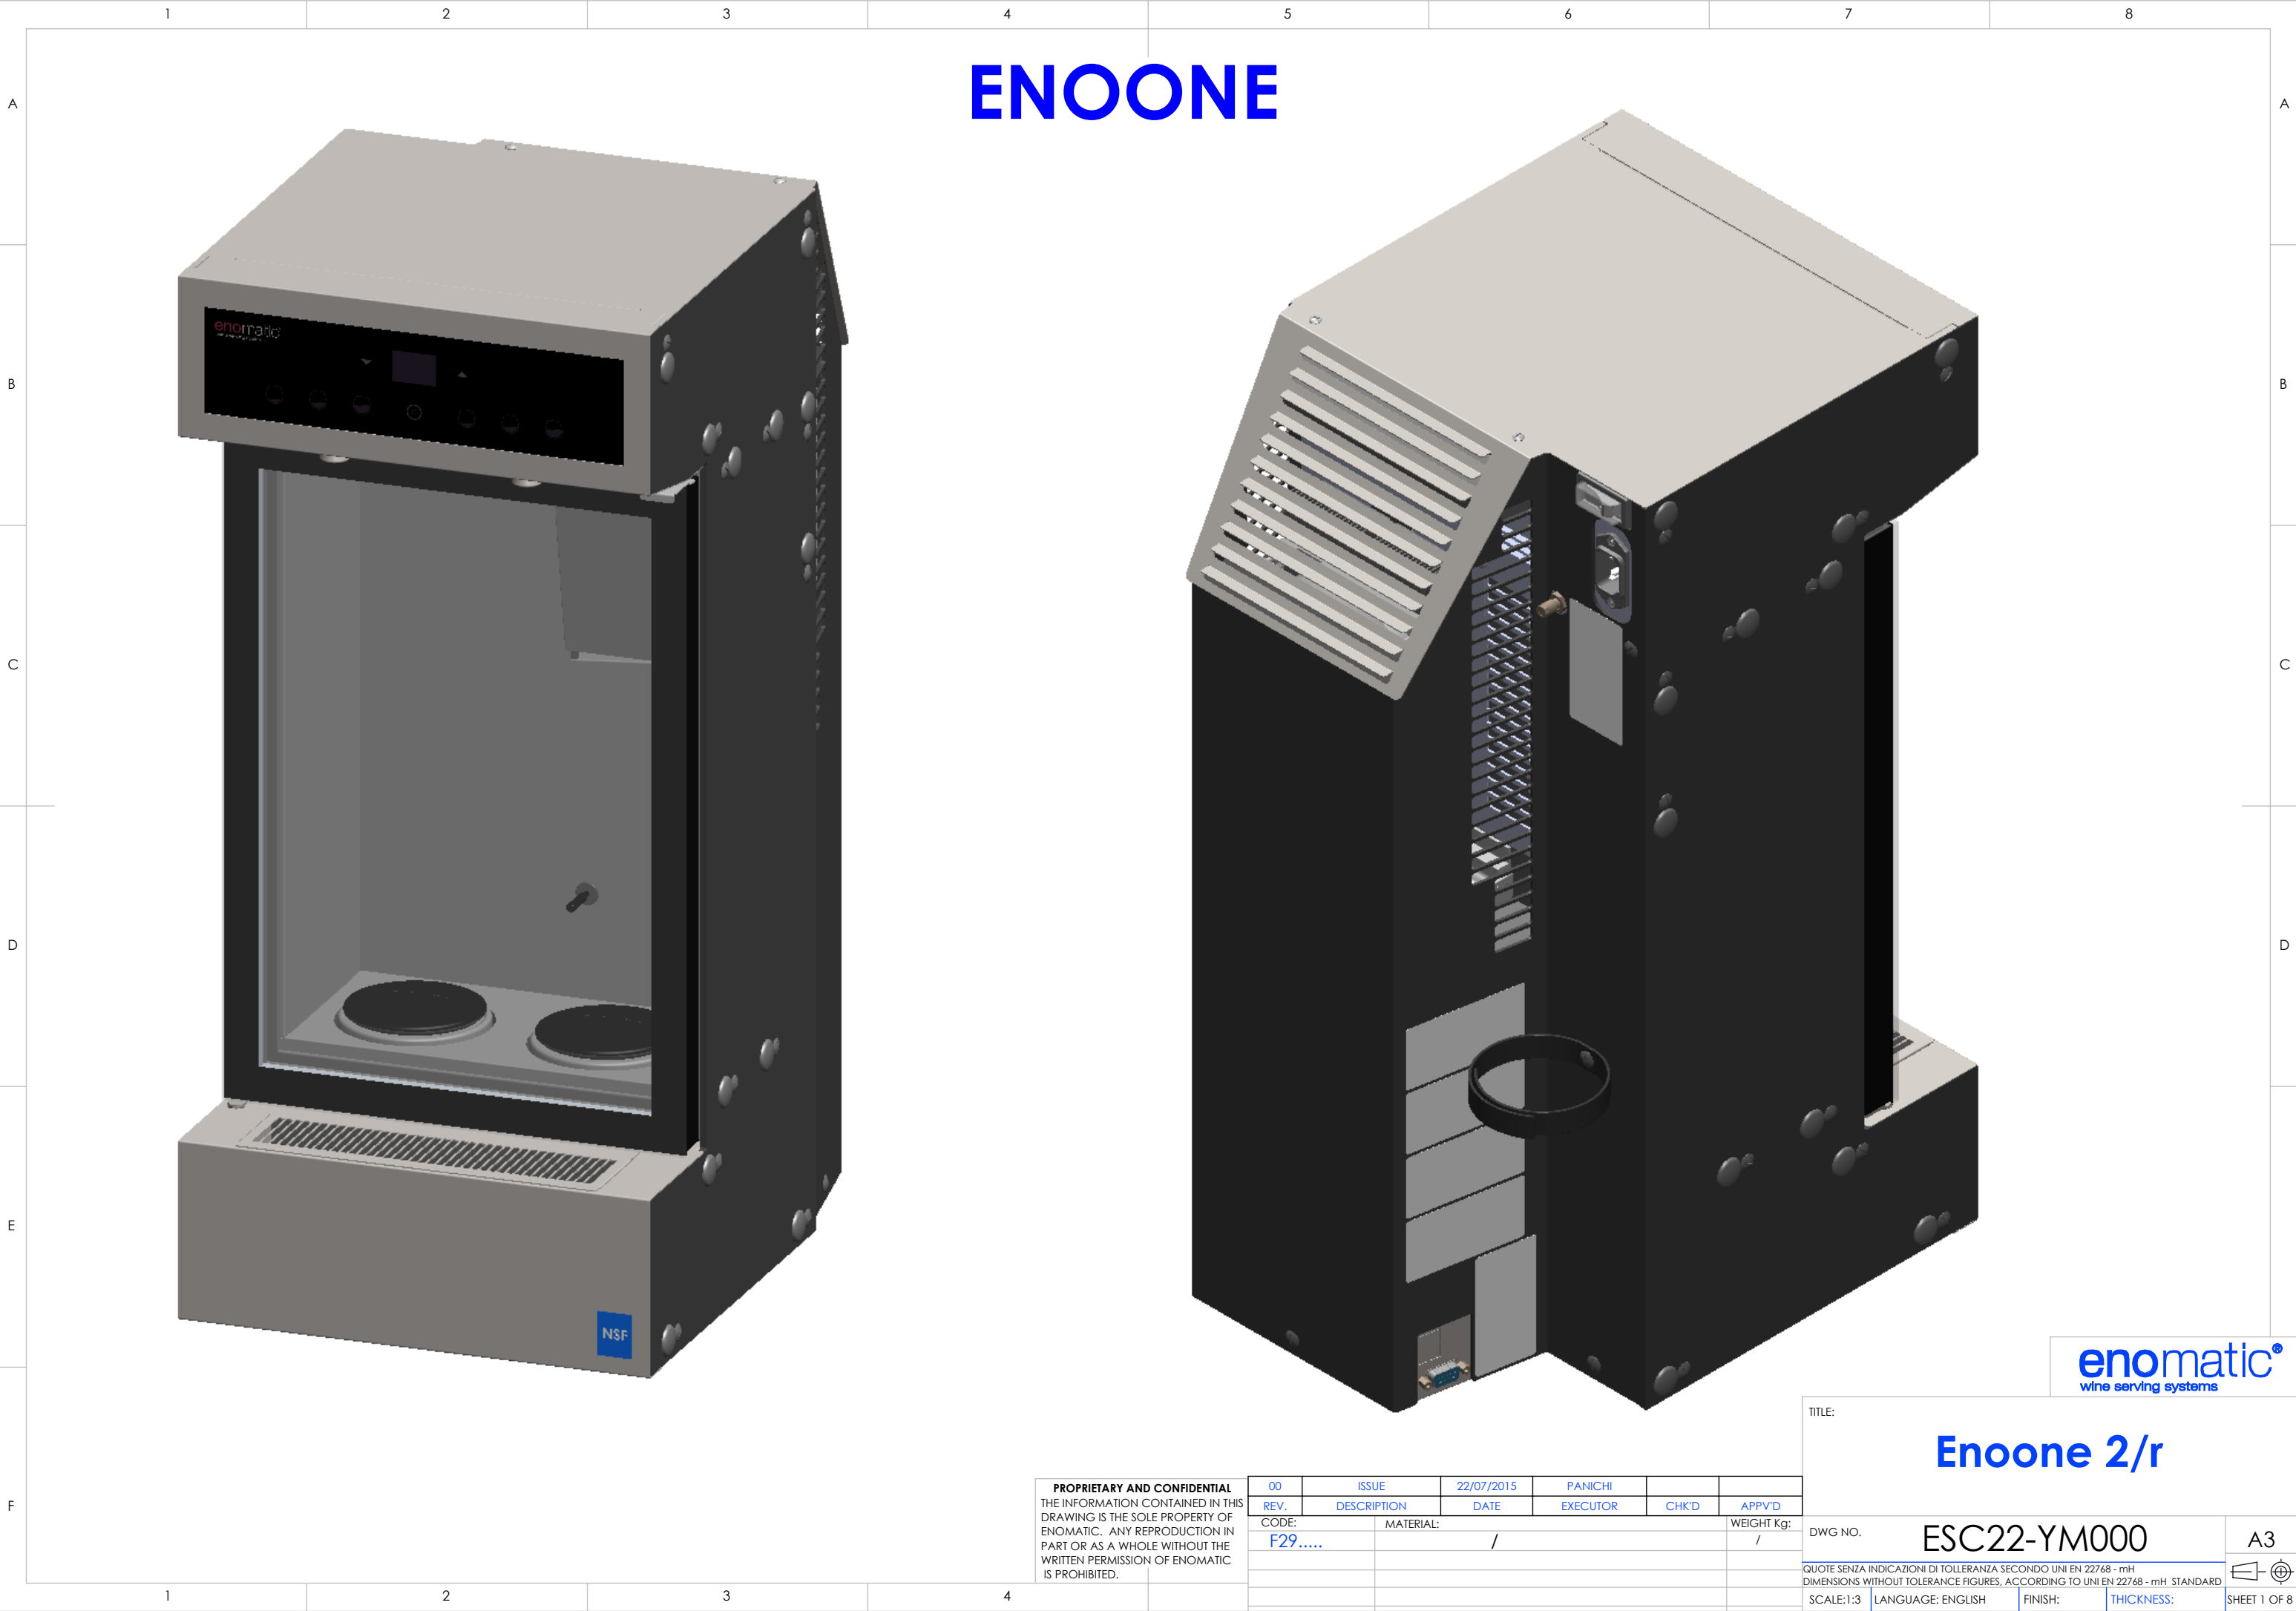

ENOONE


enomatic®
wine serving systems


Enoone 2/r

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
ENOMATIC. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF ENOMATIC
IS PROHIBITED.


00	ISSUE	22/07/2015	PANICHI		
REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE: F29.....		MATERIAL: /			WEIGHT Kg: /

TITLE:				
DWG NO.			ESC22-YM000	A3
QUOTE SENZA INDICAZIONI DI TOLLERANZA SECONDO UNI EN 22768 - mH DIMENSIONS WITHOUT TOLERANCE FIGURES, ACCORDING TO UNI EN 22768 - mH. STANDARD				
SCALE:1:3	LANGUAGE: ENGLISH	FINISH:	THICKNESS:	SHEET 1 OF 8

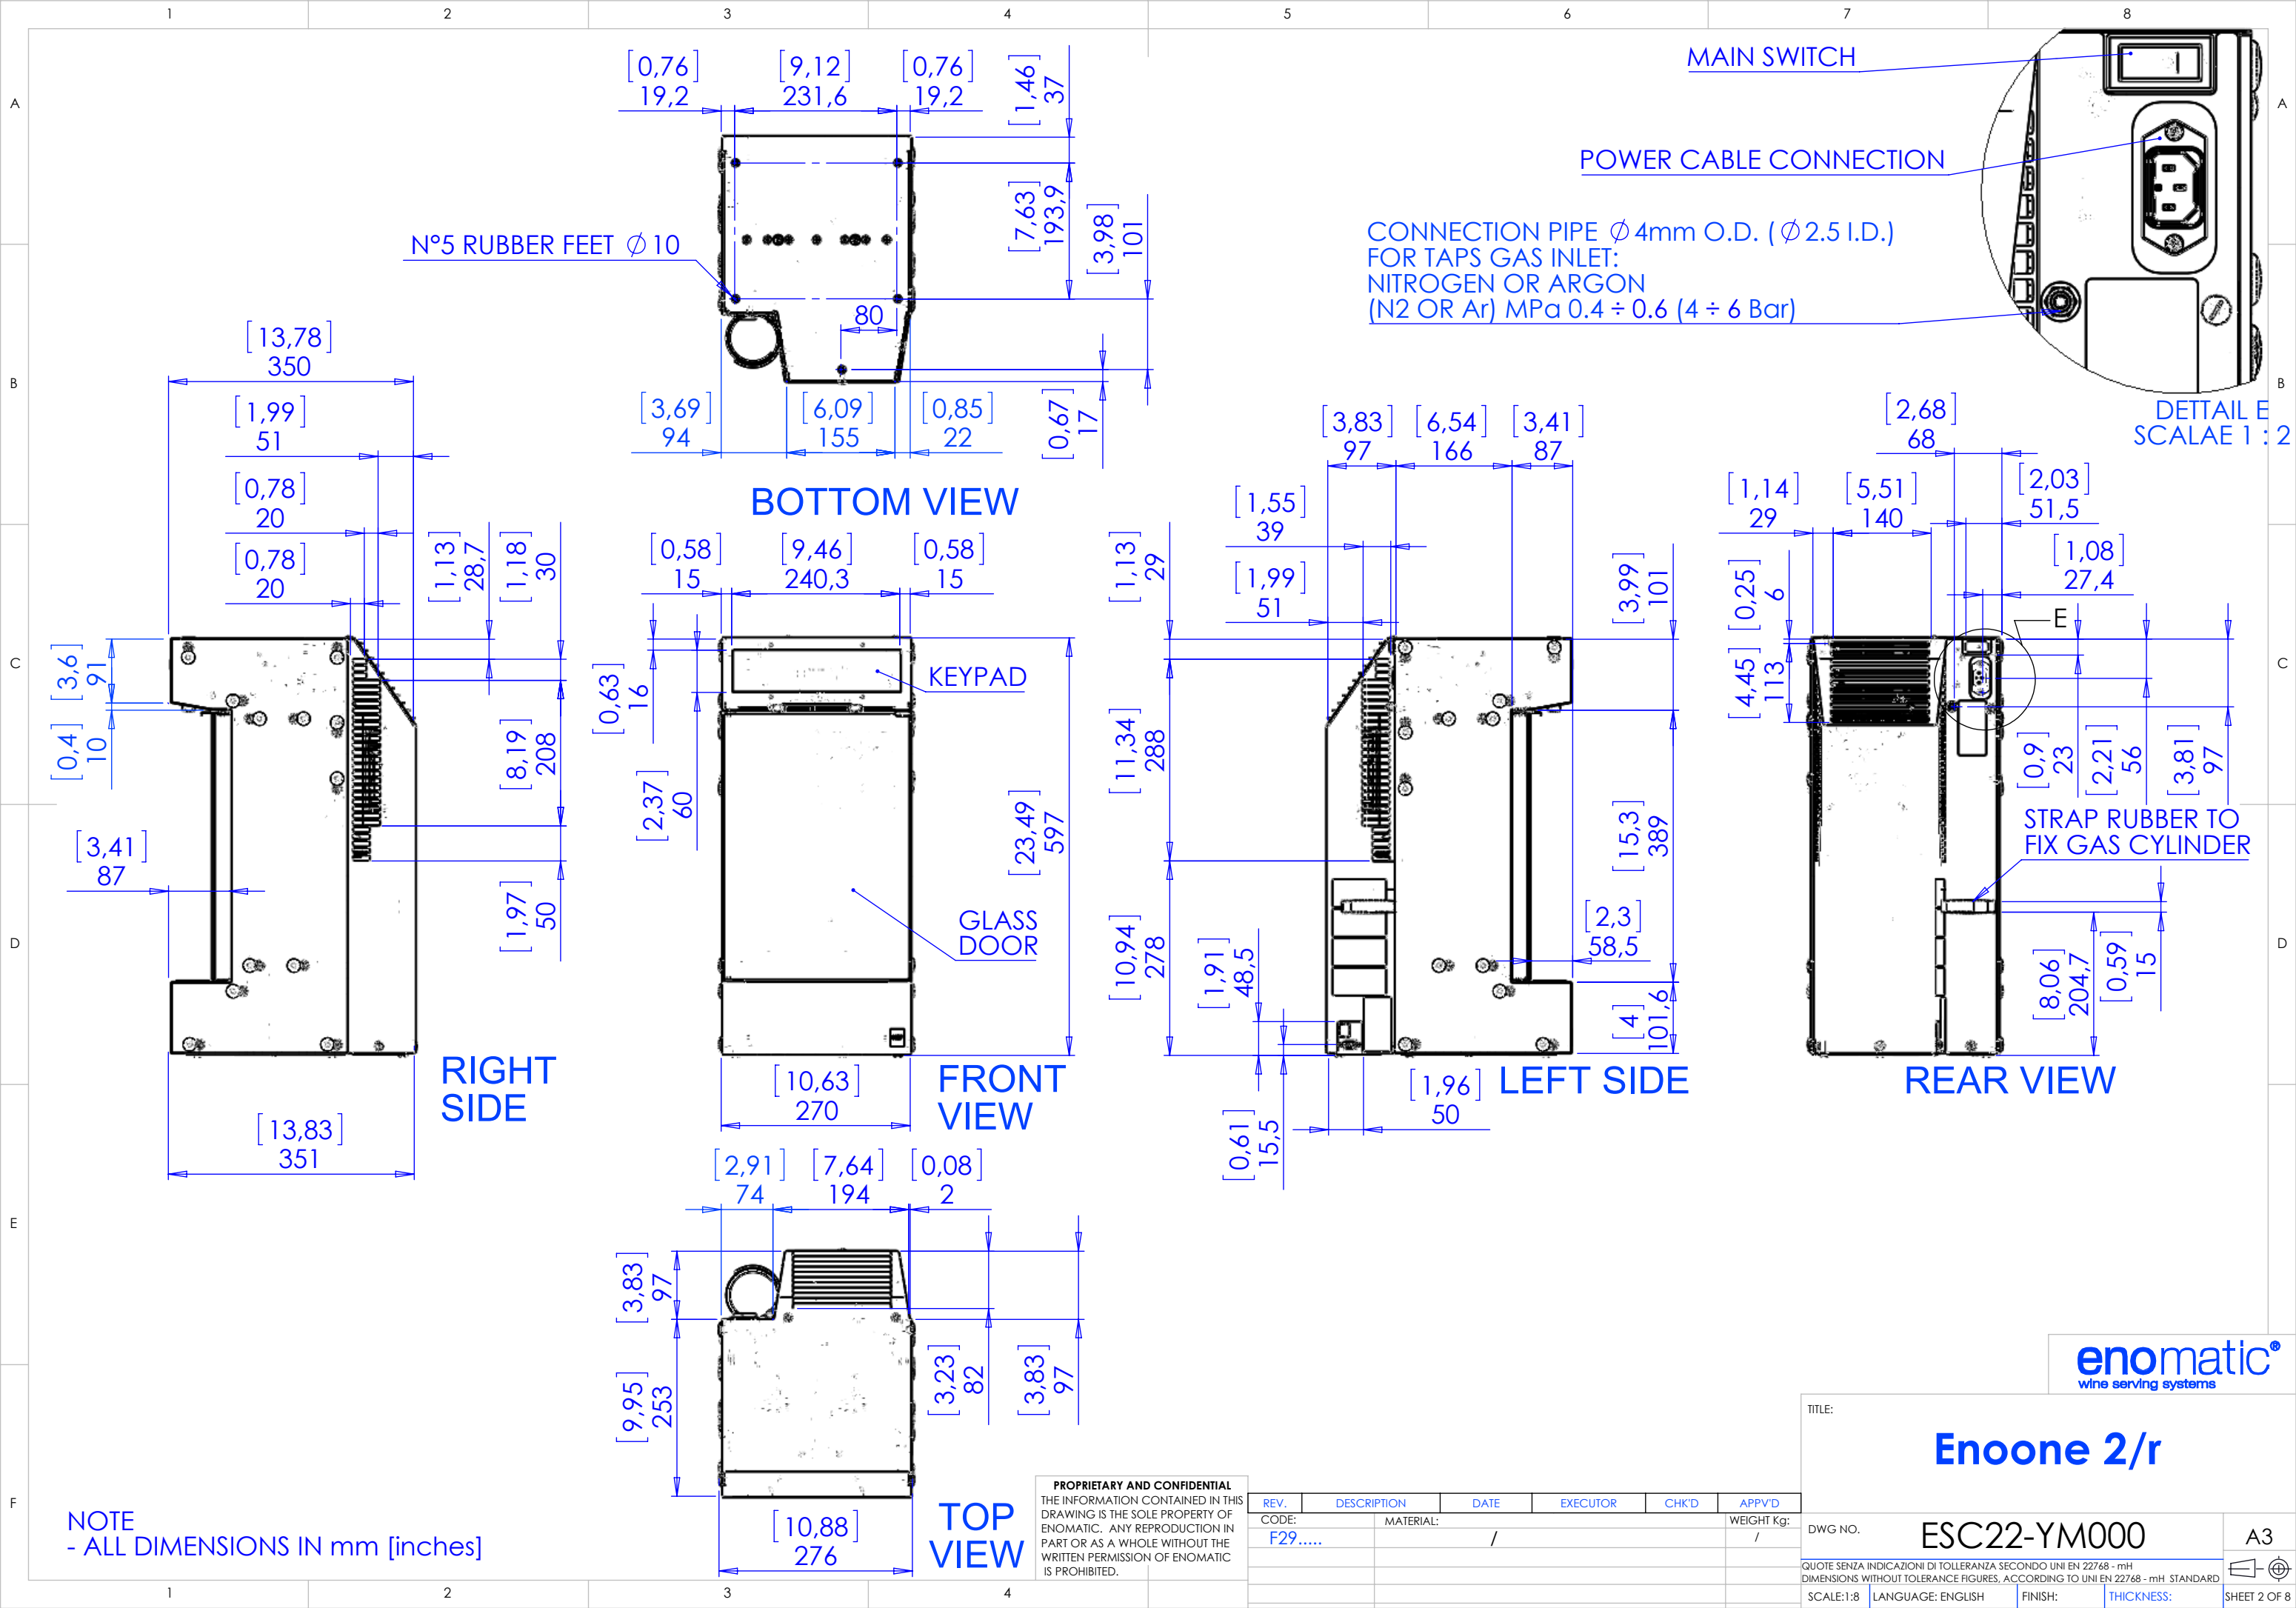


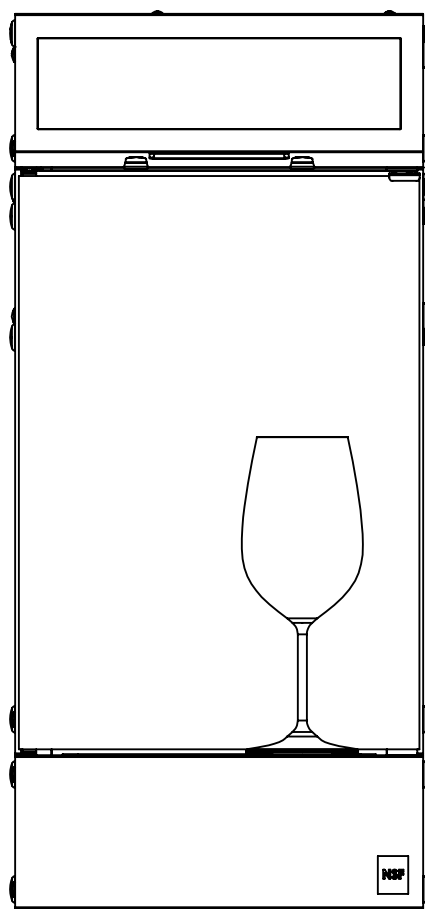



FRONT
VIEW

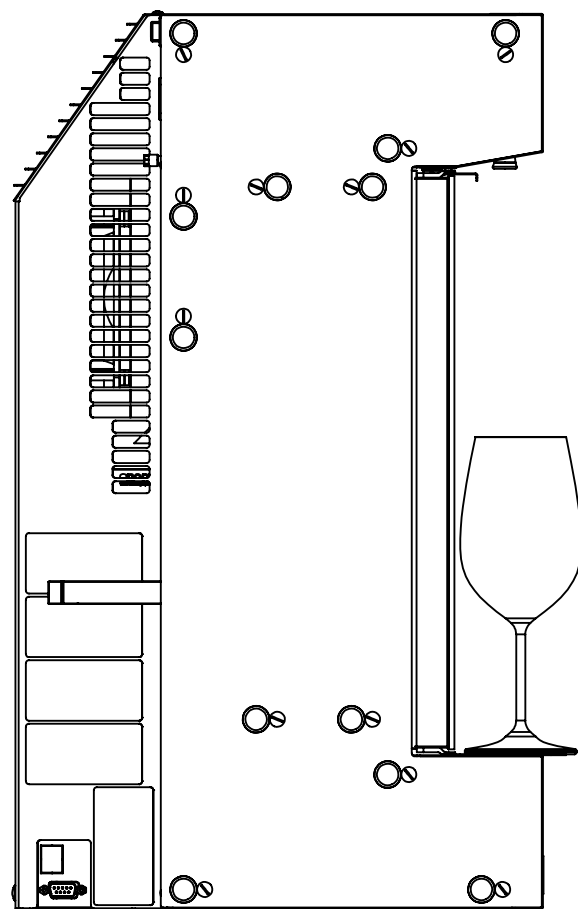

LEFT SIDE

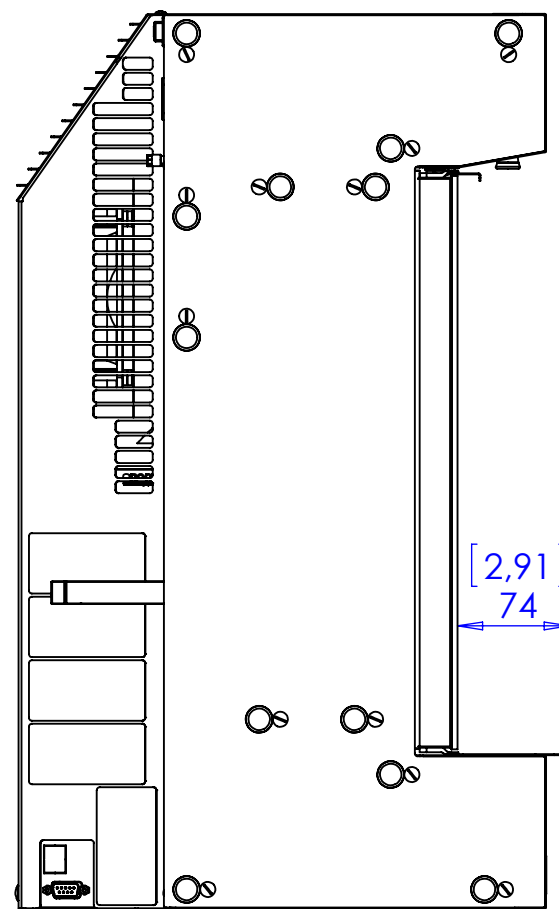

REVERSE THE DROP TRAY
FOR GLASS POSITIONING
(PICTURE REFERS TO REVERSE POSITION)

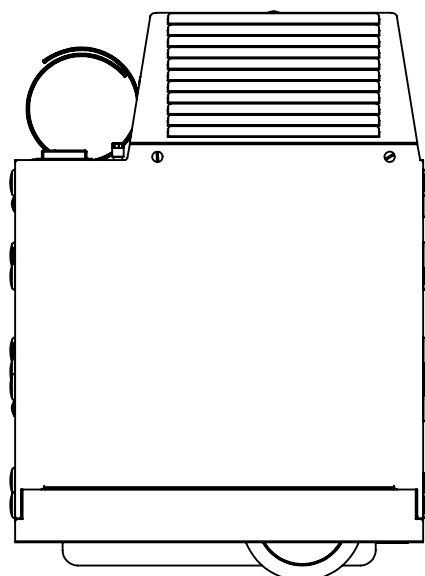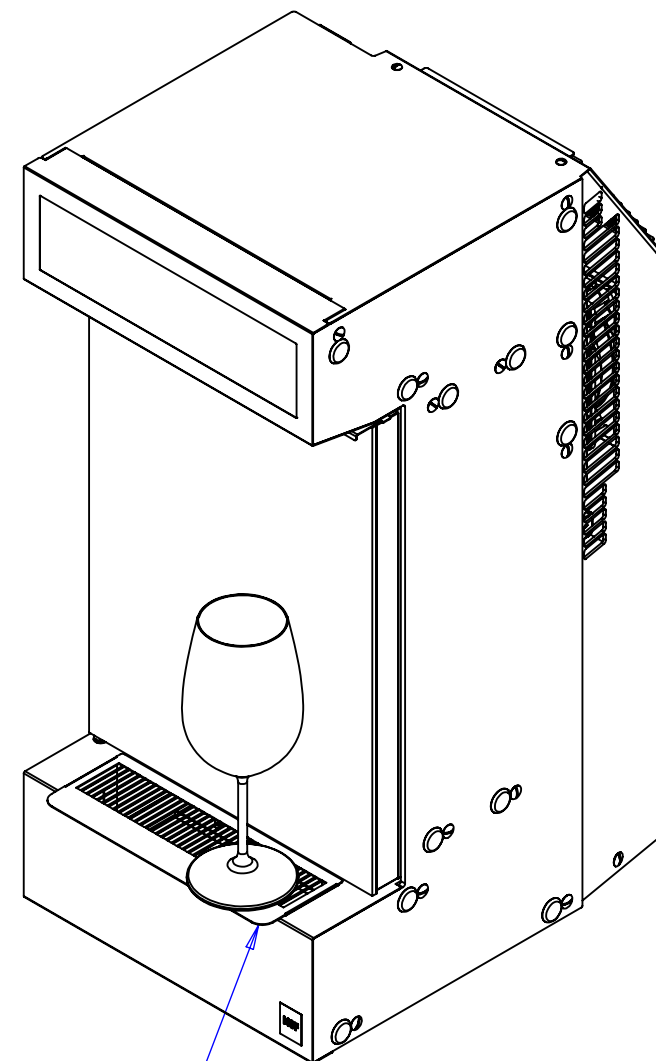

TOP
VIEW


NOTE
- ALL DIMENSIONS IN mm [inches]

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
ENOMATIC. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF ENOMATIC
IS PROHIBITED.


REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:				WEIGHT Kg:
F29.....	/				/

TITLE:				
Enoone 2/r				
DWG NO.	ESC22-YM000			A3
QUOTE SENZA INDICAZIONI DI TOLLERANZA SECONDO UNI EN 22768 - mH DIMENSIONS WITHOUT TOLERANCE FIGURES, ACCORDING TO UNI EN 22768 - mH STANDARD				
SCALE:1:5	LANGUAGE: ENGLISH	FINISH:	THICKNESS:	SHEET 3 OF 8

PRIMARY ACCESSORIES NOT INCLUDED

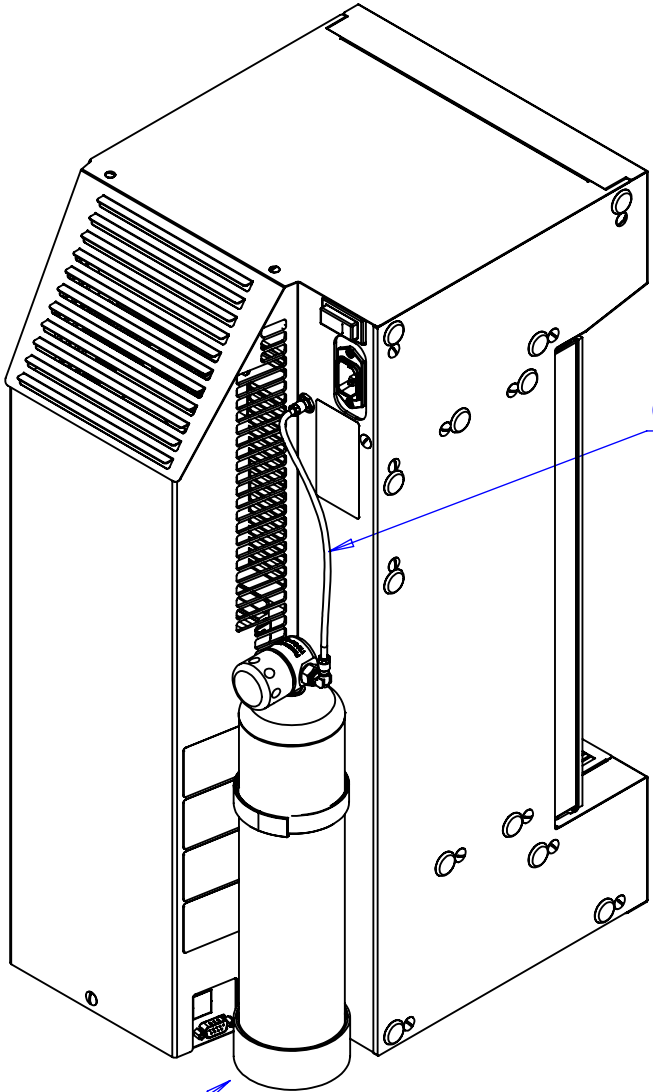

CUT PIPE WHITH ENOMATIC TOOLS

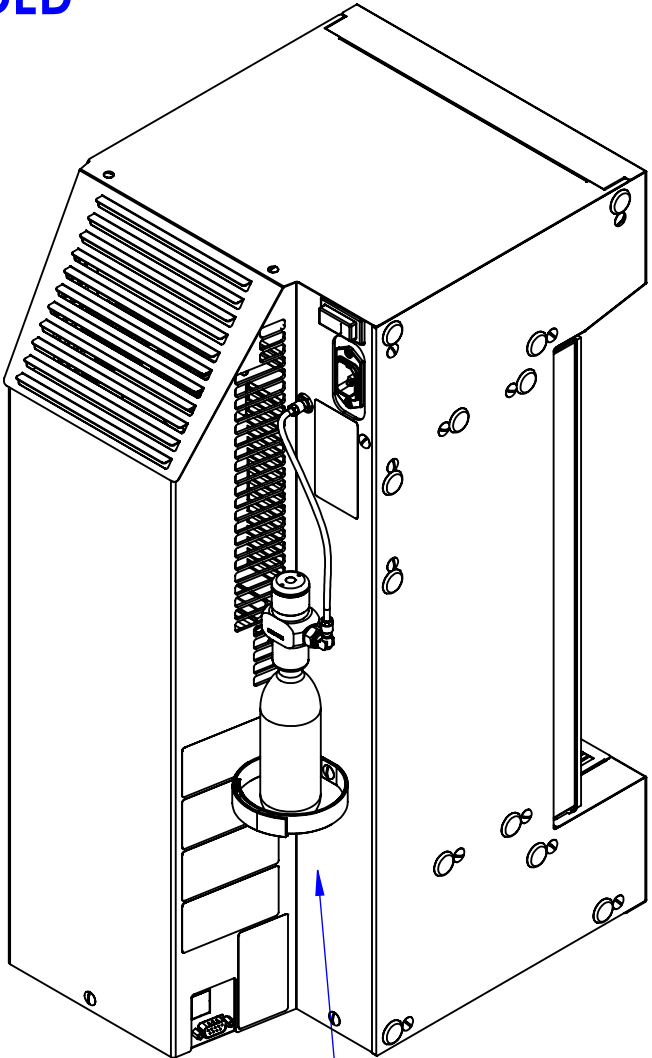


6455
CODE TO ORDER
DISPOSABLE COMPRESSED
ARGON M11x1 0,95Lt
UN 1006 , 2.2 (E) NR.12 CANISTERS

6458
CODE TO ORDER N°1
HIGH PRESSURE
REGULATOR M11x1
for disposable tanks
with needle valve


6448
CODE TO ORDER
DISPOSABLE COMPRESSED
ARGON M11x1 0,95Lt
UN 1006 , 2.2 (E) NR. 1 CANISTER

6457
CODE TO ORDER N°1
HIGH PRESSURE
REGULATOR M10X1
for disposable tanks
with needle valve

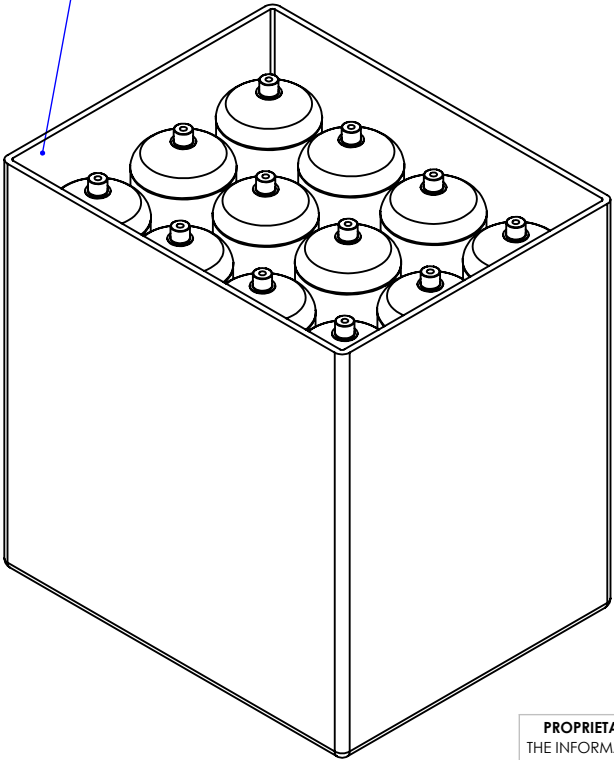

6459
CODE TO ORDER N°1
HIGH PRESSURE REGULATOR 5/8" - 18UNF
for disposable drilling tanks

6449
CODE TO ORDER
DISPOSABLE ARGON CANISTER BOX 5/8-18UNF
Argon E938 : 26grammi (1 Box of 2Bottle)

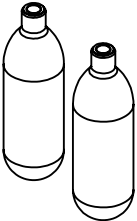

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
ENOMATIC. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF ENOMATIC
IS PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:				WEIGHT Kg:
F29.....	/				/

enomatic®
wine serving systems

TITLE:
Enoone 2/r


DWG NO. **ESC22-YM000**

QUOTE SENZA INDICAZIONI DI TOLLERANZA SECONDO UNI EN 22768 - mH
DIMENSIONS WITHOUT TOLERANCE FIGURES, ACCORDING TO UNI EN 22768 - mH. STANDARD

SCALE:1:5 LANGUAGE: ENGLISH FINISH: THICKNESS:

A3
SHEET 5 OF 8

OPTIONAL ACCESSORIES NOT INCLUDED

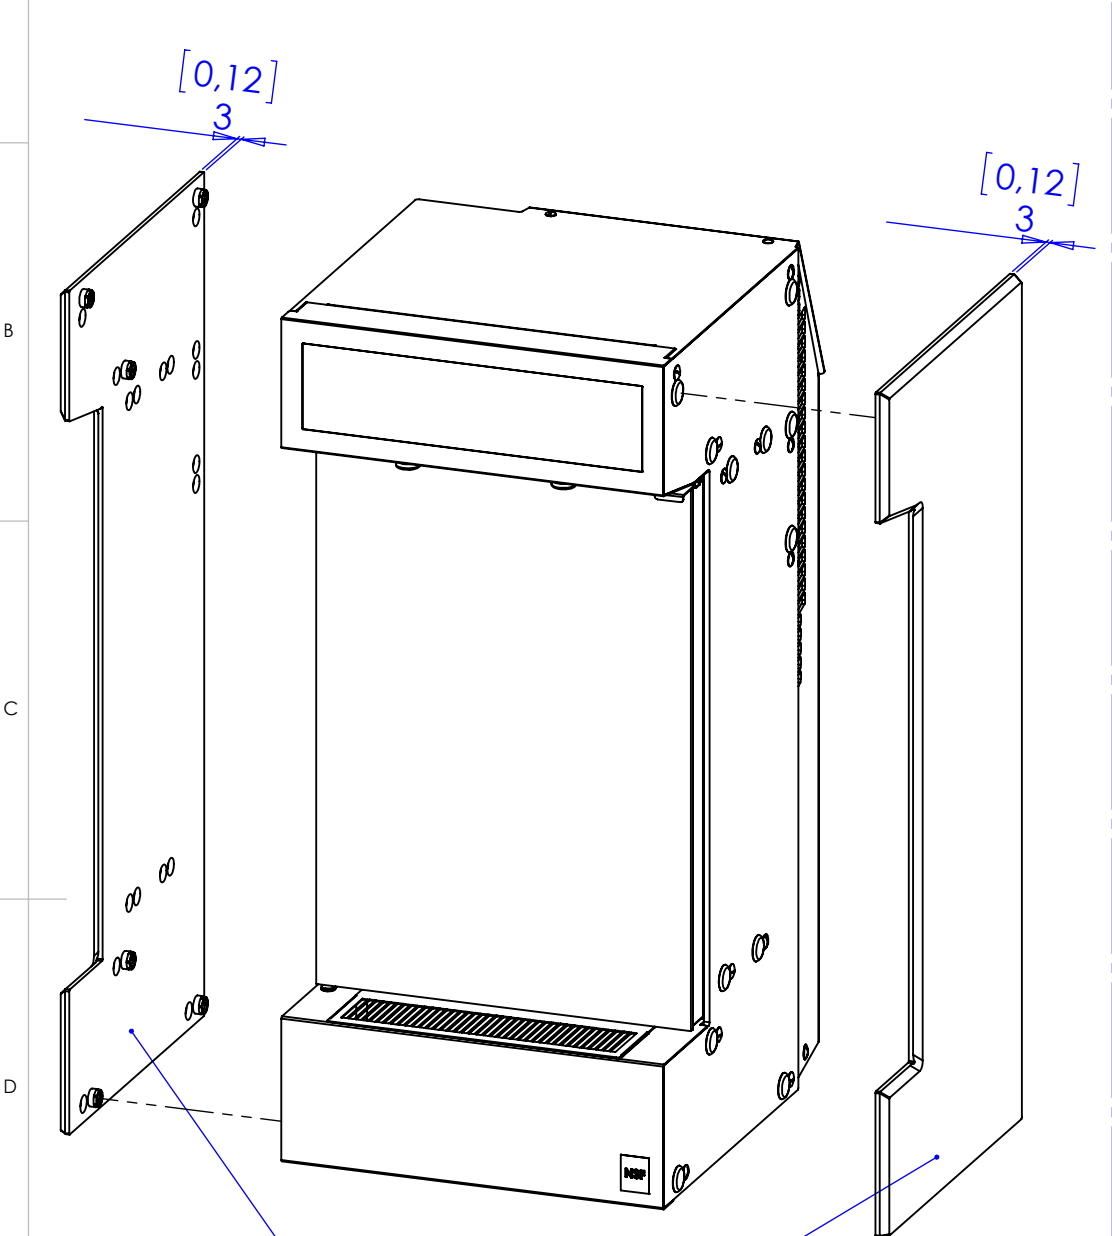


6463X
CODE TO ORDER TWO ADDITIONAL SIDES
NEEDED TO COMPLETE A DISPENSER OR A
MULTI INSTALLATION
(COMPLETE THE CODE AFTER THE LETTER
"X" TO ORDER THE DESIRED COLOUR)

NOTE
- ALL DIMENSIONS IN mm [inches]

REMOVE THE COVER

REMOVE THESE TWO SCREWS

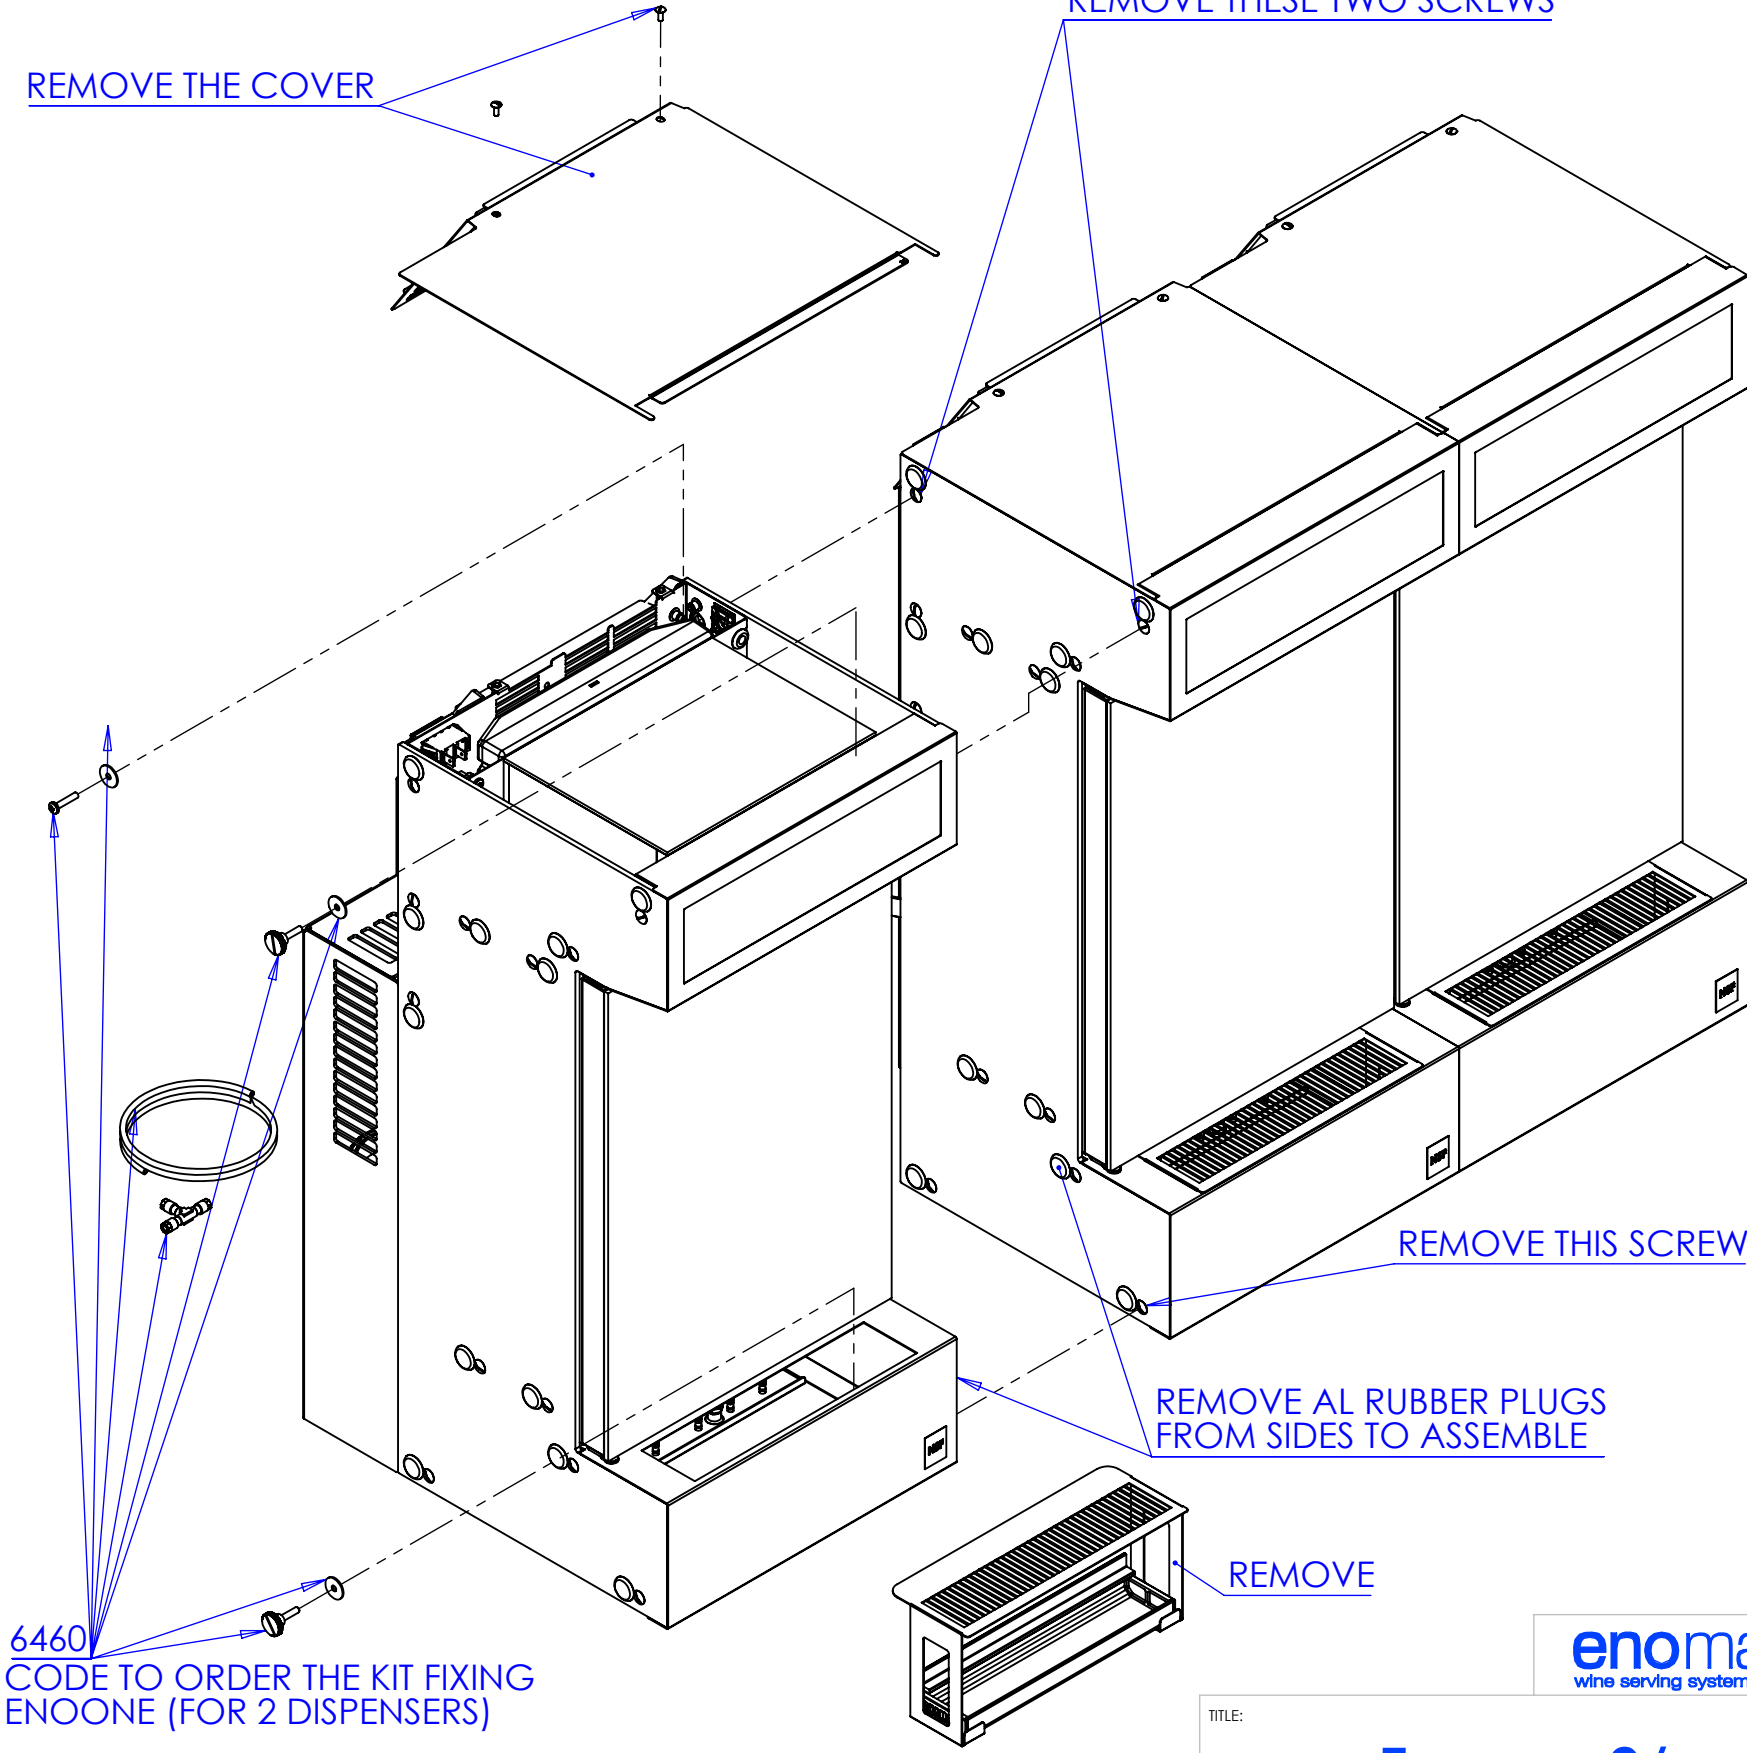

REMOVE THIS SCREW

REMOVE AL RUBBER PLUGS
FROM SIDES TO ASSEMBLE

REMOVE


6460
CODE TO ORDER THE KIT FIXING
ENOONE (FOR 2 DISPENSERS)

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
ENOMATIC. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF ENOMATIC
IS PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:				WEIGHT Kg:
F29.....	/				/

enomatic®
wine serving systems

TITLE:		Enoone 2/r	
DWG NO.	ESC22-YM000	A3	
QUOTE SENZA INDICAZIONI DI TOLLERANZA SECONDO UNI EN 22768 - mH DIMENSIONS WITHOUT TOLERANCE FIGURES, ACCORDING TO UNI EN 22768 - mH. STANDARD			
SCALE:1:5	LANGUAGE: ENGLISH	FINISH:	THICKNESS:
		SHEET 6 OF 8	

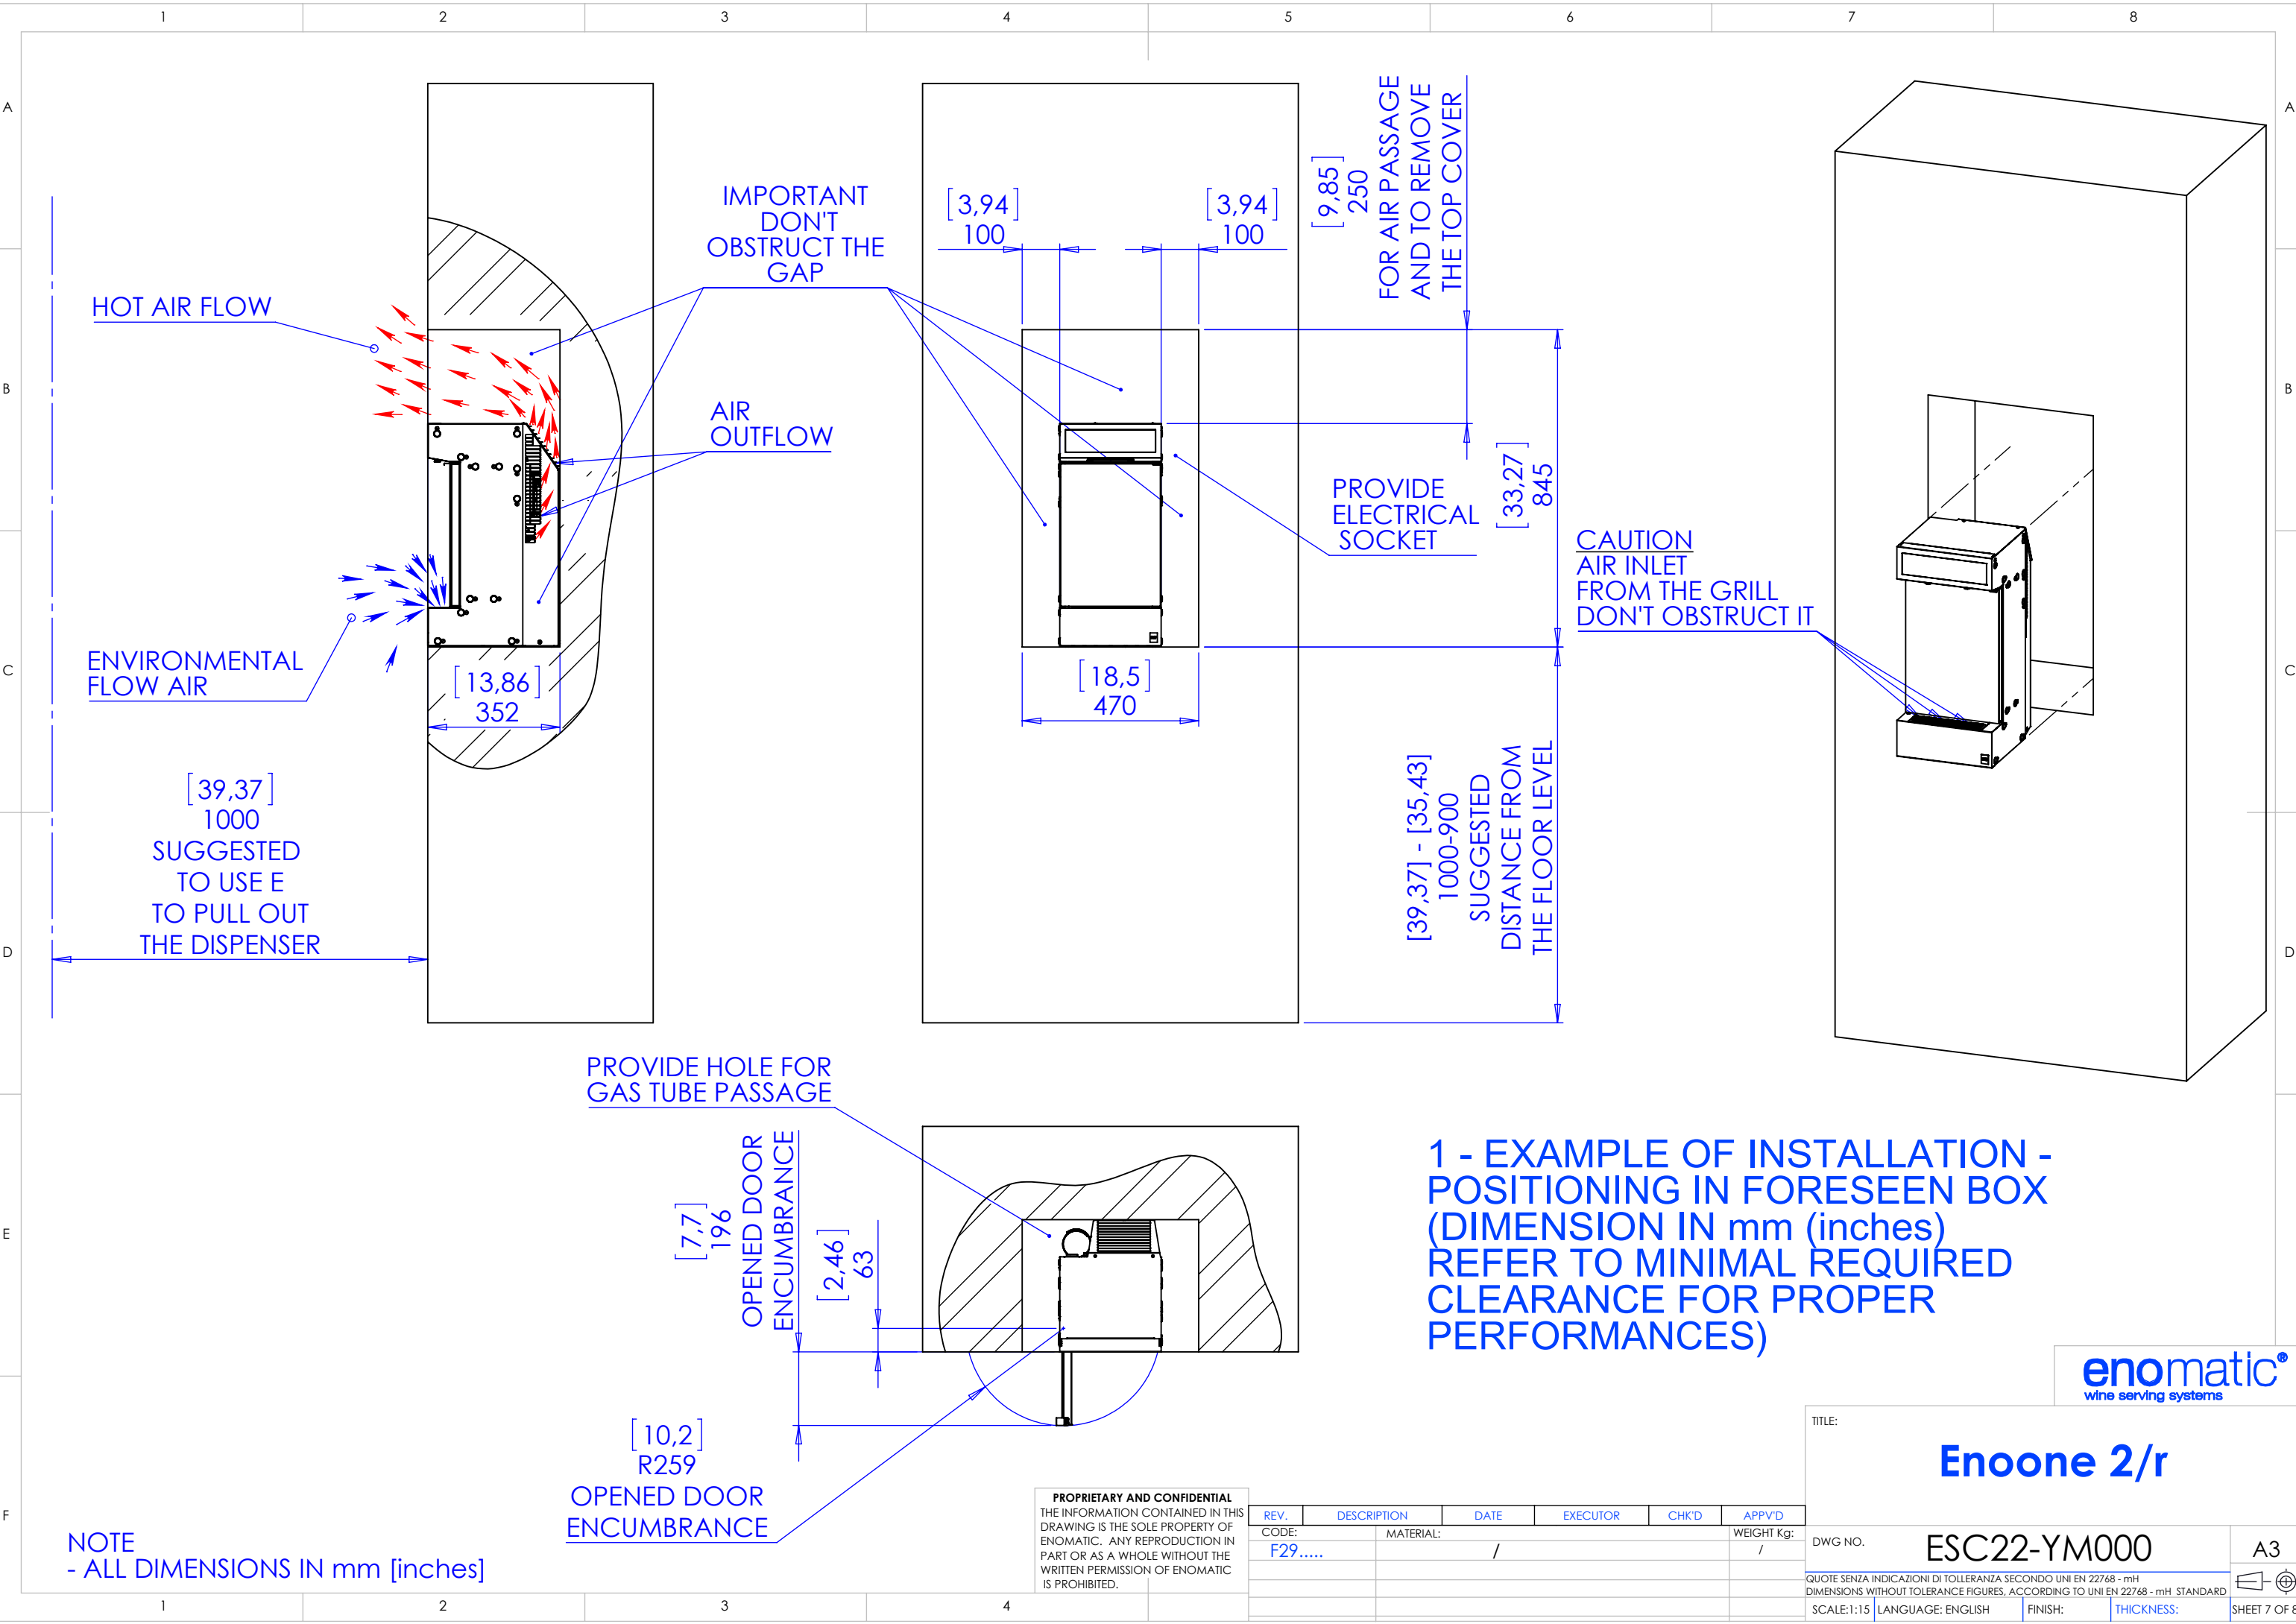

NOTE
- ALL DIMENSIONS IN mm [inches]

1 - EXAMPLE OF INSTALLATION -
POSITIONING IN FORESEEN BOX
(DIMENSION IN mm (inches)
REFER TO MINIMAL REQUIRED
CLEARANCE FOR PROPER
PERFORMANCES)

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
ENOMATIC. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF ENOMATIC
IS PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:				WEIGHT Kg:
F29.....	/				/

TITLE:

Enoone 2/r

DWG NO.

ESC22-YM000

SCALE:1:15


LANGUAGE: ENGLISH

FINISH:

THICKNESS:

A3

SHEET 7 OF 8

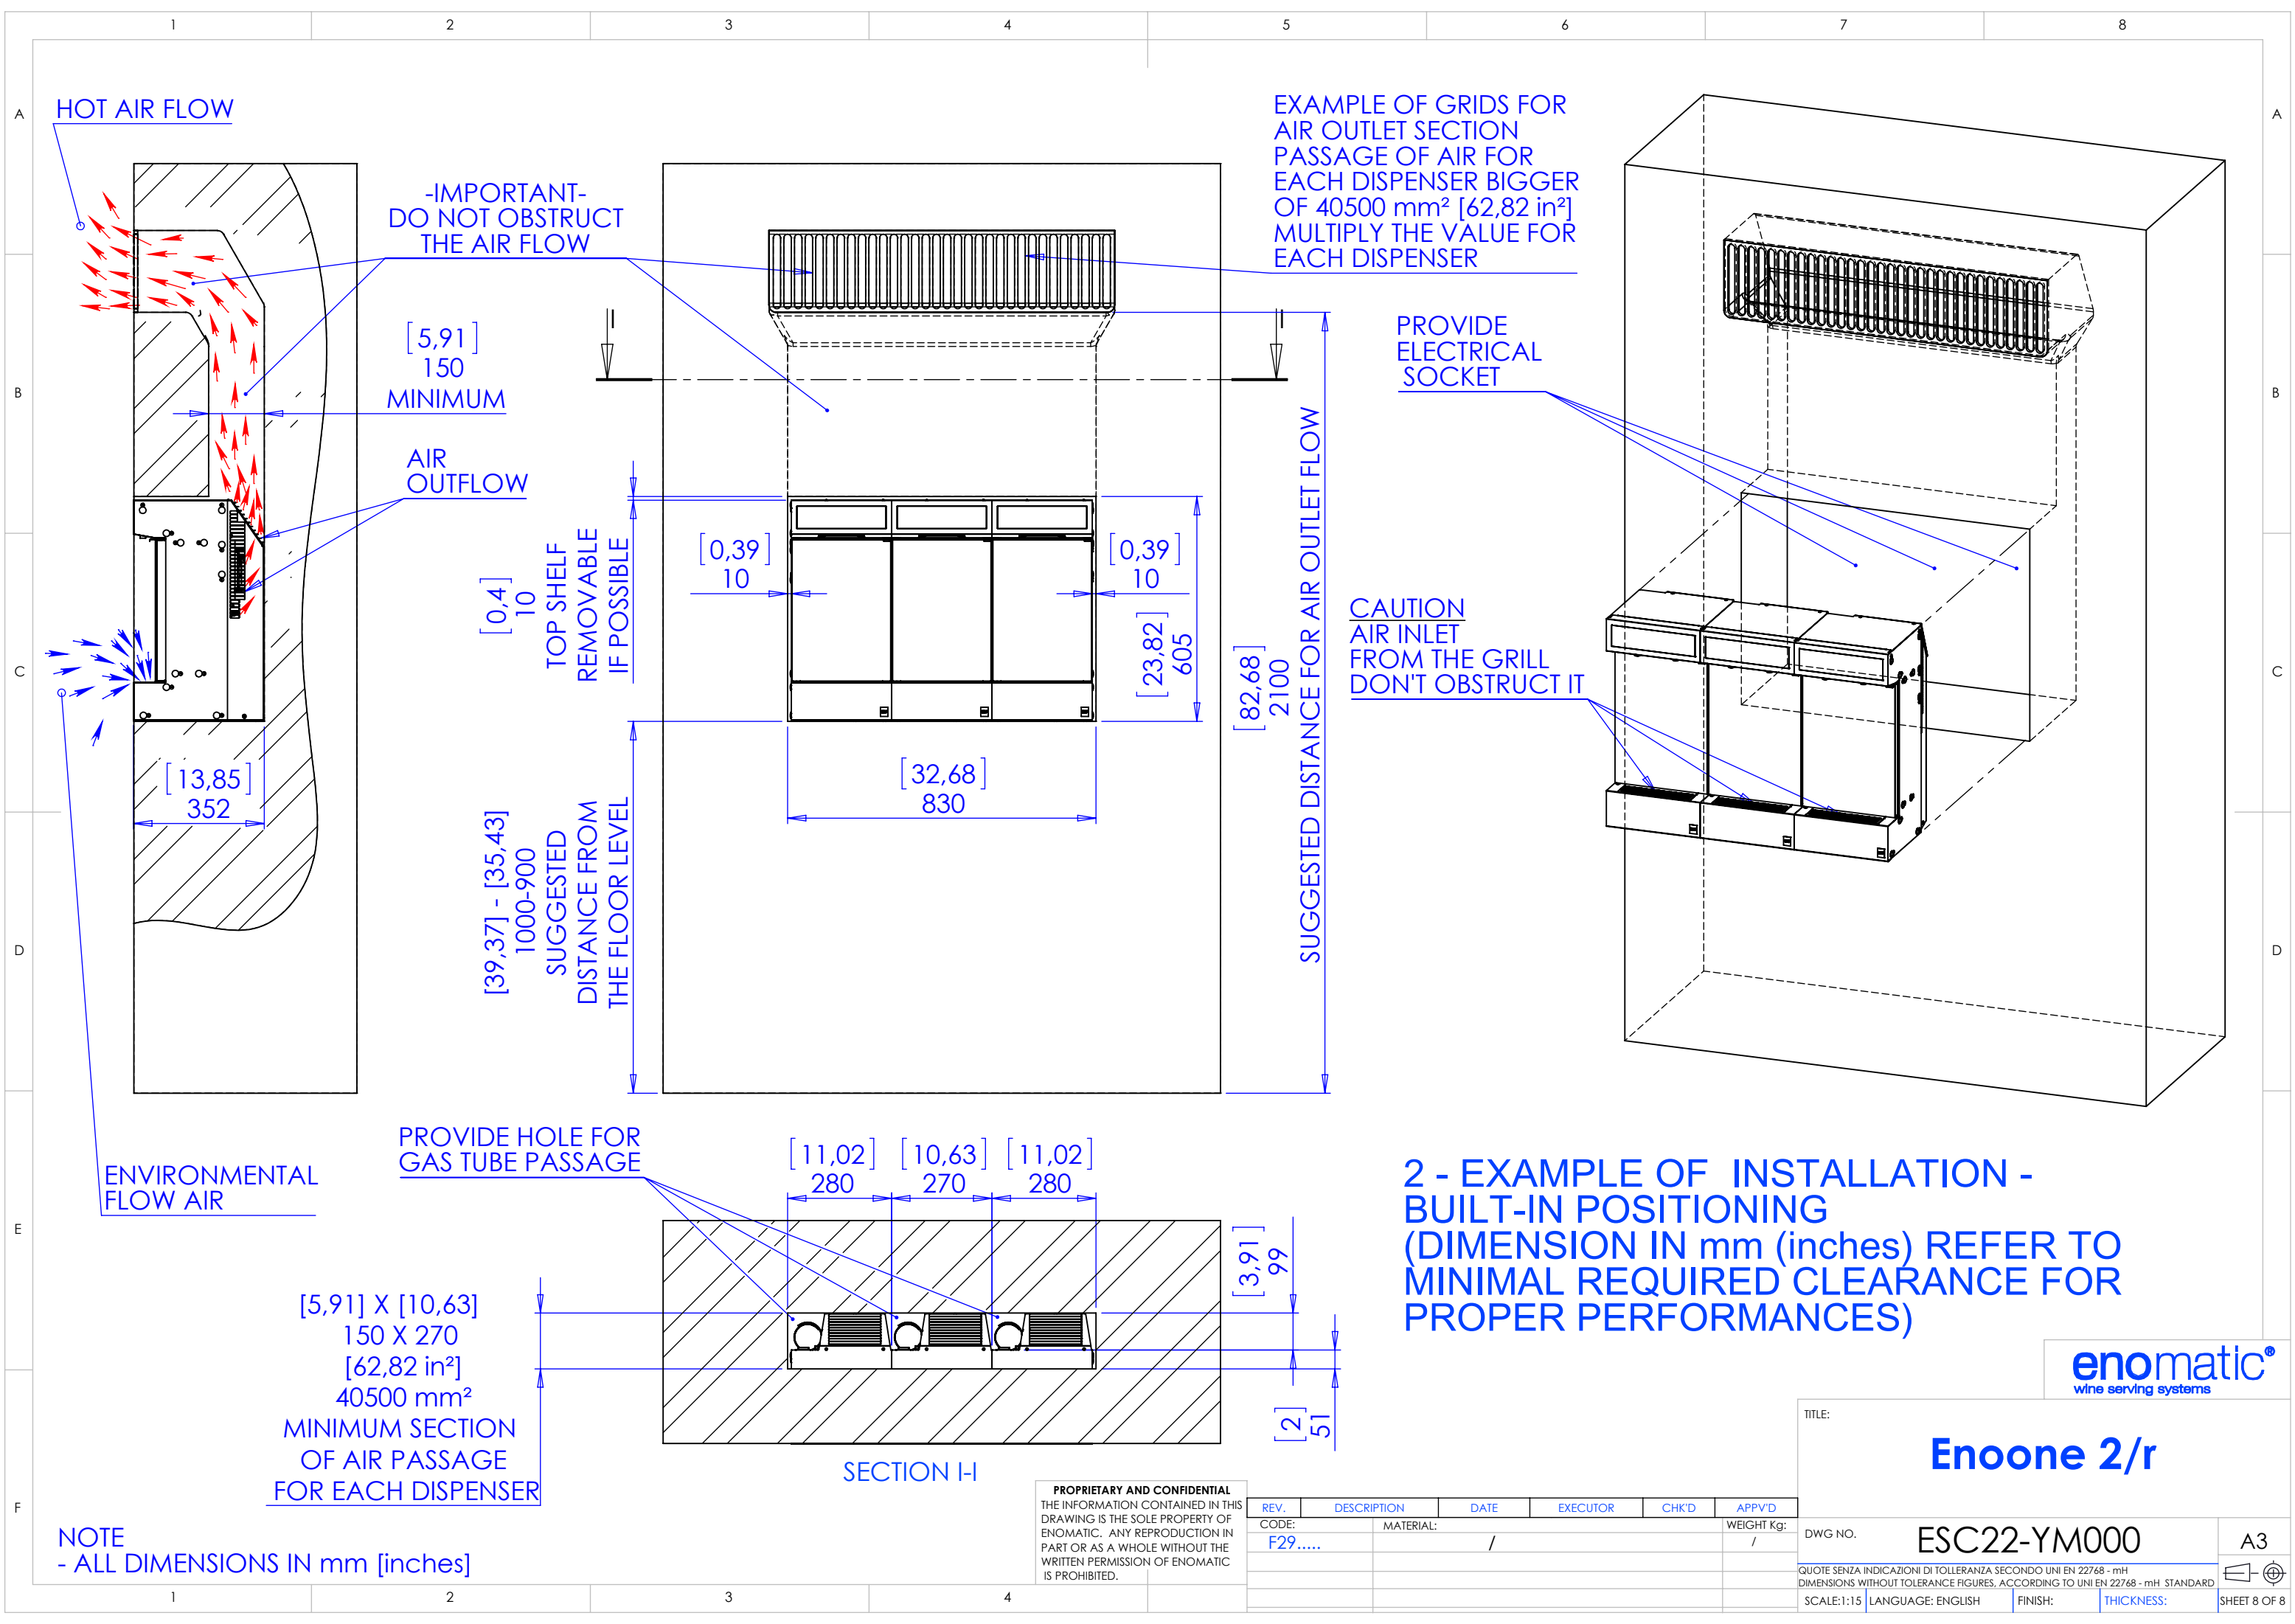

HOT AIR FLOW

-IMPORTANT-
DO NOT OBSTRUCT
THE AIR FLOW

[5,91]
150
MINIMUM

AIR
OUTFLOW

[0,4]
10
TOP SHELF
REMOVABLE
IF POSSIBLE

[39,37] - [35,43]
1000-900
SUGGESTED
DISTANCE FROM
THE FLOOR LEVEL

[13,85]
352

[0,39]
10

[32,68]
830

[0,39]
10

[23,82]
605

[82,68]
2100
SUGGESTED DISTANCE FOR AIR OUTLET FLOW

EXAMPLE OF GRIDS FOR
AIR OUTLET SECTION
PASSAGE OF AIR FOR
EACH DISPENSER BIGGER
OF 40500 mm² [62,82 in²]
MULTIPLY THE VALUE FOR
EACH DISPENSER

PROVIDE
ELECTRICAL
SOCKET

CAUTION
AIR INLET
FROM THE GRILL
DON'T OBSTRUCT IT

PROVIDE HOLE FOR
GAS TUBE PASSAGE

[5,91] X [10,63]
150 X 270
[62,82 in²]
40500 mm²
MINIMUM SECTION
OF AIR PASSAGE
FOR EACH DISPENSER

[11,02] [10,63] [11,02]
280 270 280

[3,91]
99
[2]
51

SECTION I-I

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
ENOMATIC. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF ENOMATIC
IS PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:				WEIGHT Kg:
F29.....	/				/

TITLE:

Enoone 2/r

ESC22-YM000

DWG NO.

A3

QUOTE SENZA INDICAZIONI DI TOLLERANZA SECONDO UNI EN 22768 - mH
DIMENSIONS WITHOUT TOLERANCE FIGURES, ACCORDING TO UNI EN 22768 - mH STANDARD

SCALE: 1:15 LANGUAGE: ENGLISH FINISH: THICKNESS: SHEET 8 OF 8